




This is the overflow tube. The water level should stop 1" below the top of tube when the toilet finishes its cycle.
1 – 2 GPM/1440 – 2880 GPD
(GPM = gallons per minute)
(GPD = gallons per day)



This is the flapper. Sometimes it will stick open and the toilet will continue to run.
2 – 5 GPM/2880 - 7200 GPD
OR
The flapper can also become mushy and deformed and will not seat and allows water to seep by.
1 – 2 GPM/1440 – 2880 GPD



This is the float. If it sticks or is not adjusted properly the water will not stop and will flow into the overflow tube.
1 – 3 GPM/1440 – 4320 GPD

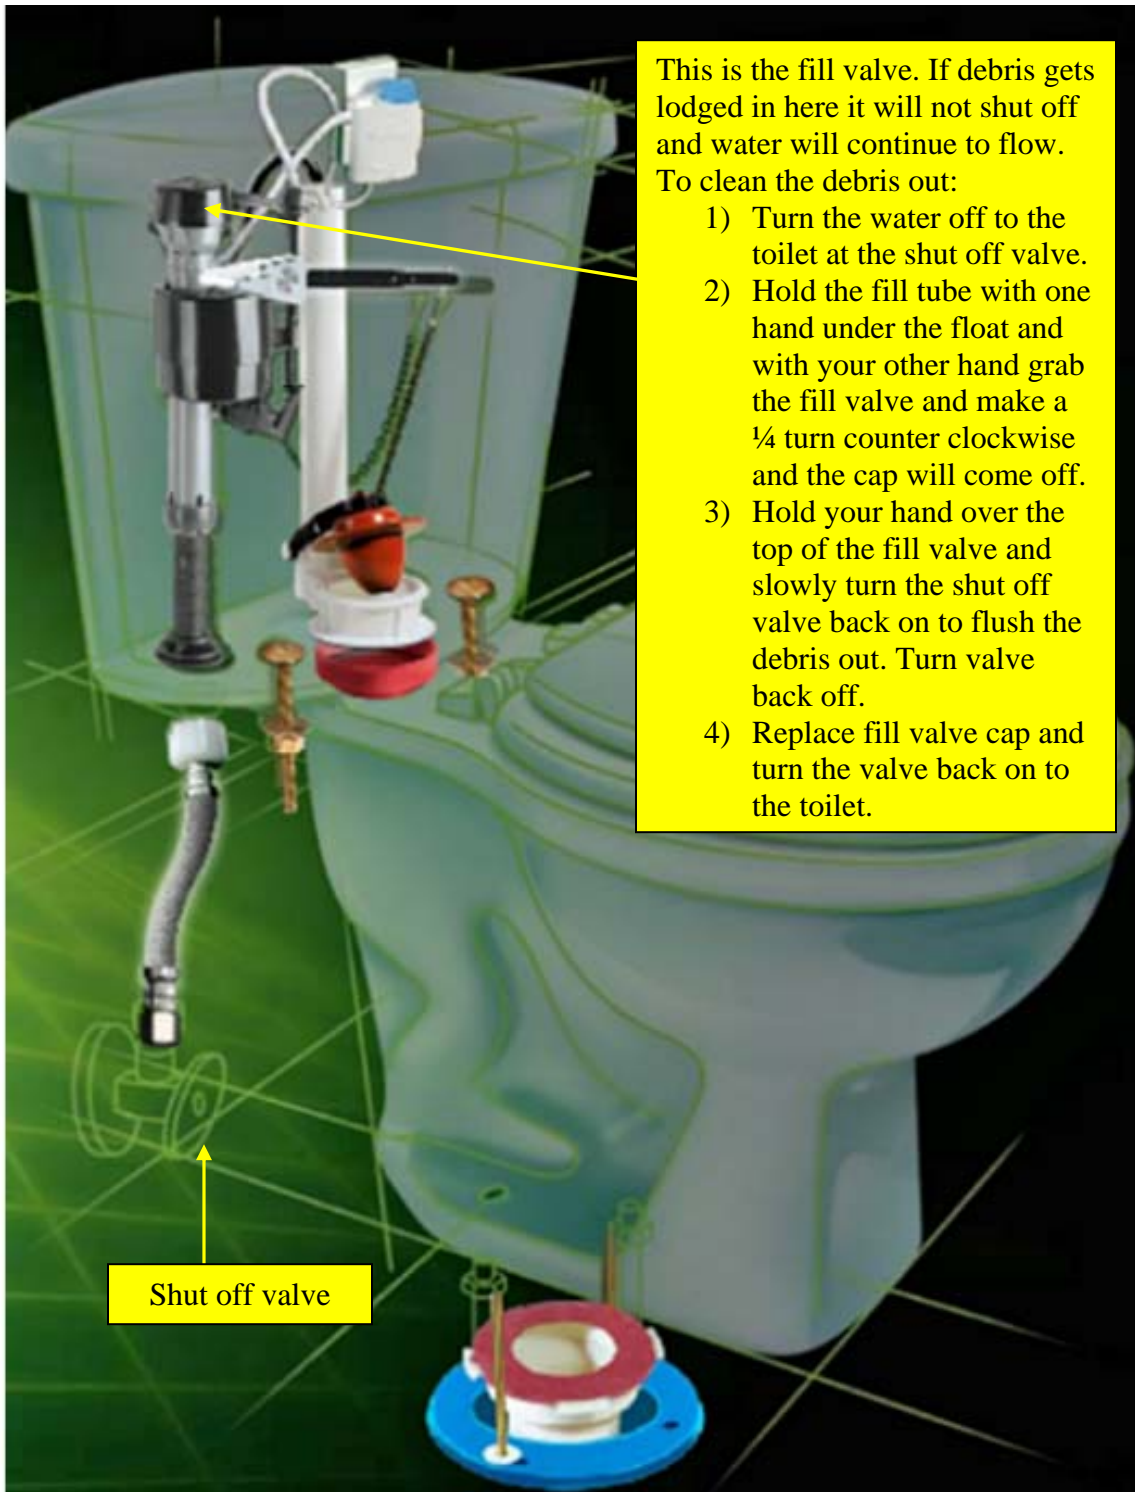

This is the fill valve. If debris gets lodged in here it will not shut off and water will continue to flow. To clean the debris out:

- 1) Turn the water off to the toilet at the shut off valve.
- 2) Hold the fill tube with one hand under the float and with your other hand grab the fill valve and make a ¼ turn counter clockwise and the cap will come off.
- 3) Hold your hand over the top of the fill valve and slowly turn the shut off valve back on to flush the debris out. Turn valve back off.
- 4) Replace fill valve cap and turn the valve back on to the toilet.

Shut off valve